

72-241 Removal and installation of outside door handle on rear door


Removal, installation

1 Pull sealing frame in door lock range out of holding rail.


2 Unscrew hex. socket screw (3 mm) for about 4 turns.




3 Slip cover to the rear and remove.

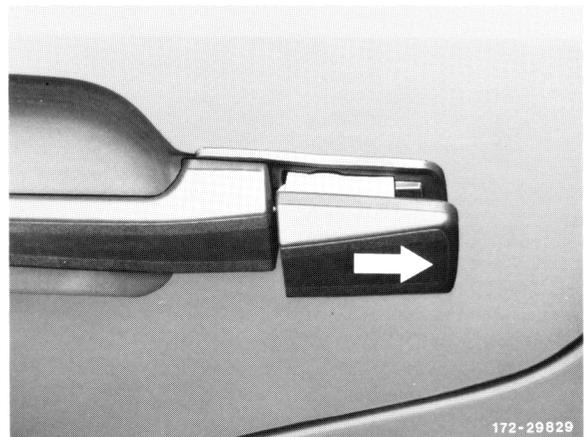


4 Push grab handle to the rear and remove.

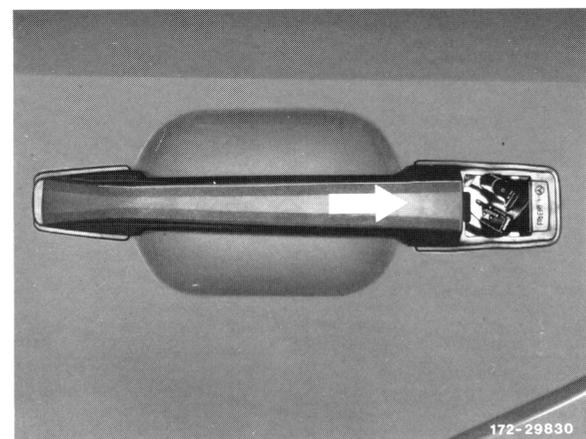


- 5 Remove rubber rosette.
- 6 Remove door lining (72-101) and loosen plastic foil in rear upper range.

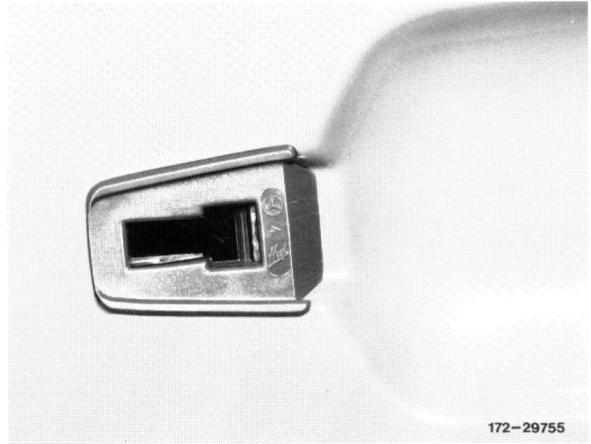

- 7 Loosen screws on bearing bracket.

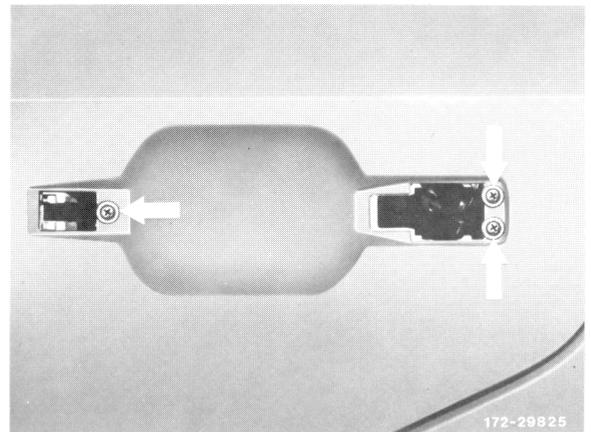

- 8 Pull bearing bracket forward and remove through assembly opening in door inside plate.
- 9 For installation proceed vice versa.

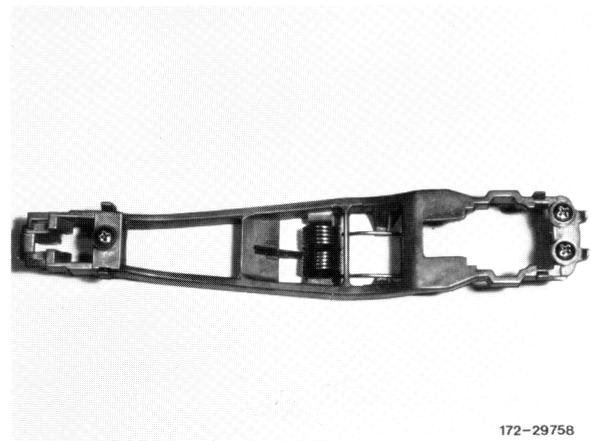

Note: When installing grab handle, insert link of rubber rosette between door plate and bearing bracket.

