


## 72-240 Removal and installation of outside door handle on driver's door

---


### Removal, installation

---


1 Force off cover and unscrew hex. socket screws (3 mm) for approx. 4 turns.

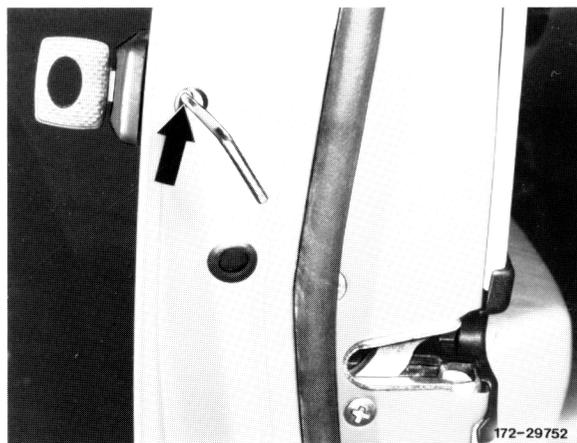


2 Insert door key into locking cylinder, turn approx. 60° to the right while simultaneously forcing locking cylinder toward the rear out of detent on door plate and remove.

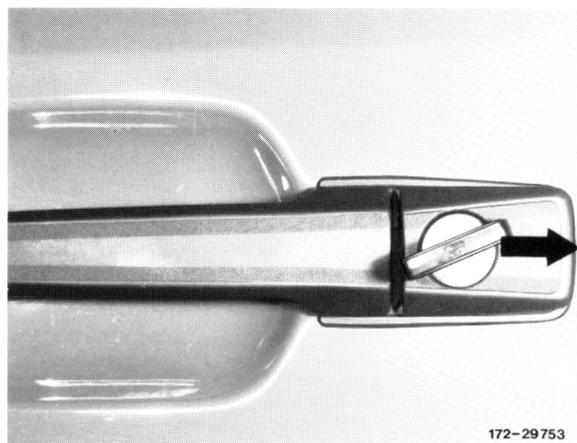

3 Push grab handle to the rear.

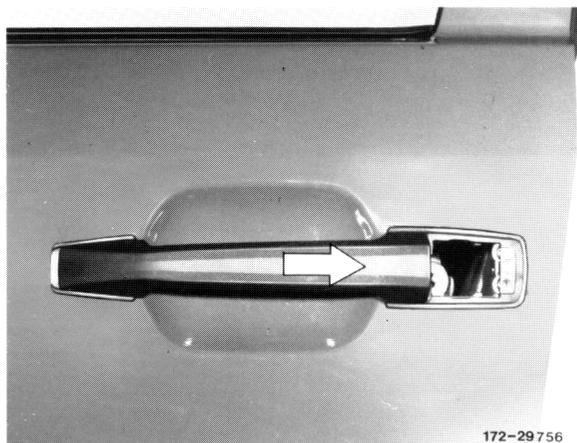


4 Remove grab handle front and rear out of bearing bracket.

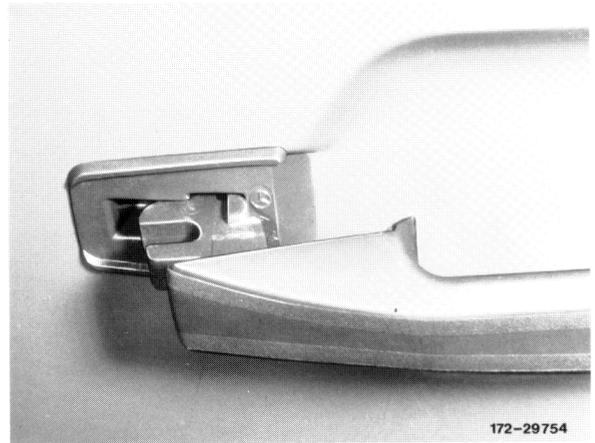


5 Remove rubber rosette.


6 Remove door trim (72-100) and loosen plastic foil in upper range.

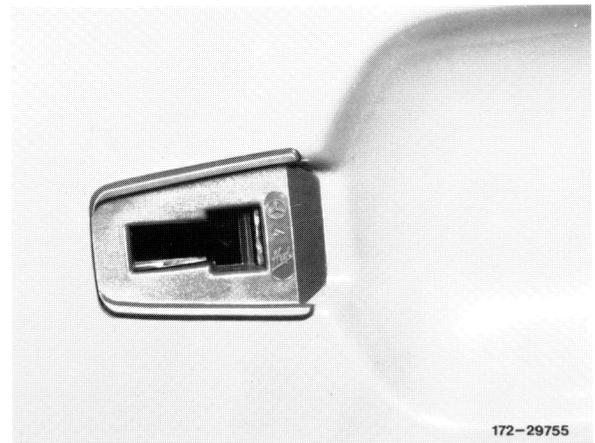

7 Loosen screws on bearing bracket.

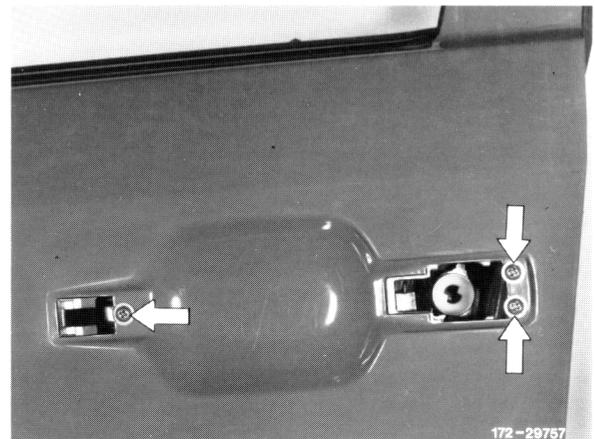

8 Pull bearing bracket forward and remove via assembly opening in door inside plate.

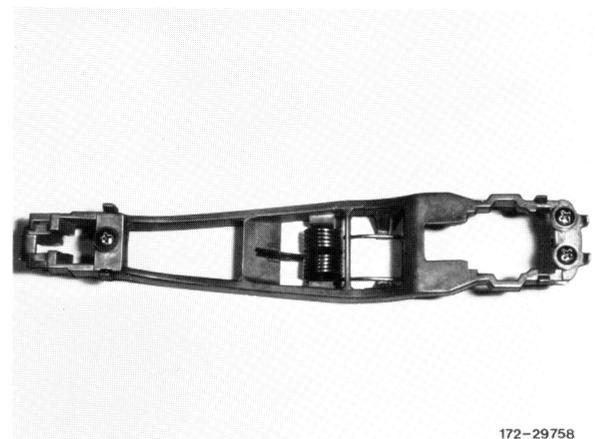

9 For installation proceed vice versa.

**Note:** When installing grab handle, insert link of rubber rosette between door plate and bearing bracket.

